

SPEED LIMIT

15 MPH*

*Unless otherwise posted

SAFETY RULES & REGULATIONS

- PPE required at all times: Protective Eye Glasses; CL2 Reflective Vest; Closed-toe Shoes
- Obey all terminal signs
- No passengers
- Park vehicle before using electronic devices
- Use headlights and emergency flashers
- Seatbelts required
- Turn off engine before exiting vehicle
- Do not approach moving equipment
- Request permission and ensure tracks are clear prior to crossing
- No pull-through parking
- No backing up in lanes
- Perform tug test
- Yield to all ramp equipment
- Dispose of all trash prior to arrival
- Report all damage incidents to terminal
- The use of profanity, threats of violence or physical confrontation is prohibited

KEY ACTIONS FOR SUCCESS

PRE-ARRIVAL – FIRST TIME

- Verify CDL credentials
- Register in the IANA/UIIA Intermodal Driver Database – uiia.org
- Download the ShipCSX app from Google Play or the Apple Store and verify billing
- Access the XGate app and plan all in-gate/out-gate moves

PRE-ARRIVAL – ONGOING

- Verify billing in ShipCSX.com
- Ensure information integrity

ARRIVAL

- IANA-registered CDL required
- Hazmat placards must be 5' above bottom of container on all four sides

CAUTION: Enter through the in-gate portal no faster than 5 MPH

XGATE

- XGate mobile applications users only
- Have in-gate mission code ready to scan
- After scanning in-gate QR code, follow mission as directed
- For assistance, use the phone located inside the Driver Assistance area to be directly connected with a terminal representative

SSK IN-GATE

- Ensure information integrity
- Enter CDL, Container Number, Chassis, Seal and Booking Numbers
- Press “NO” on Keep Chassis Prompt
- Follow directions on J1/Mission Ticket or as provided by kiosk
- Retain J1/Mission Ticket for out-gate
- For assistance, use the phone located inside the Driver Assistance area to be directly connected with a terminal representative

ROADABILITY

- Drivers with equipment issues should proceed to roadability area
- Follow posted rules in roadability area
- Remain in truck

DEPARTURE

XGATE

- Must use XGate on out-gate if used for in-gate
- Wait for driver ahead to clear
- Enter XGate portal at 5 mph, maintain constant and consistent speed
- Scan out-gate QR code
- For assistance, use the phone located inside the Driver Assistance area to be directly connected with a terminal representative

SSK OUT-GATE

- Must use SSK on out-gate if used for in-gate
- Travel in designated SSK lane

ADDITIONAL RESOURCES

CSXINTERMODALTERMINALS.COM

XGate registration instructions, user guide and FAQs



Scan QR Code to download the XGate app

Drayman are required to comply with all safety rules in the **Drayman Safety Rulebook**

Review the **Drayman Safety Brief** for rules and policies to operate safely on a CSX intermodal facility

Knowledge of CSX Intermodal Terminal rules are the responsibility of each individual drayman

SHIPCSX.COM

Check billing, storage, reservation information and container locations

CSX INTERMODAL
TERMINALS

700 Kriner Road, Chambersburg, PA 17202

12/2022


CHAMBERSBURG DRAYMAN GUIDE



CSX INTERMODAL
TERMINALS

CHAMBERSBURG, PA

700 Kriner Road,
Chambersburg, PA 17202

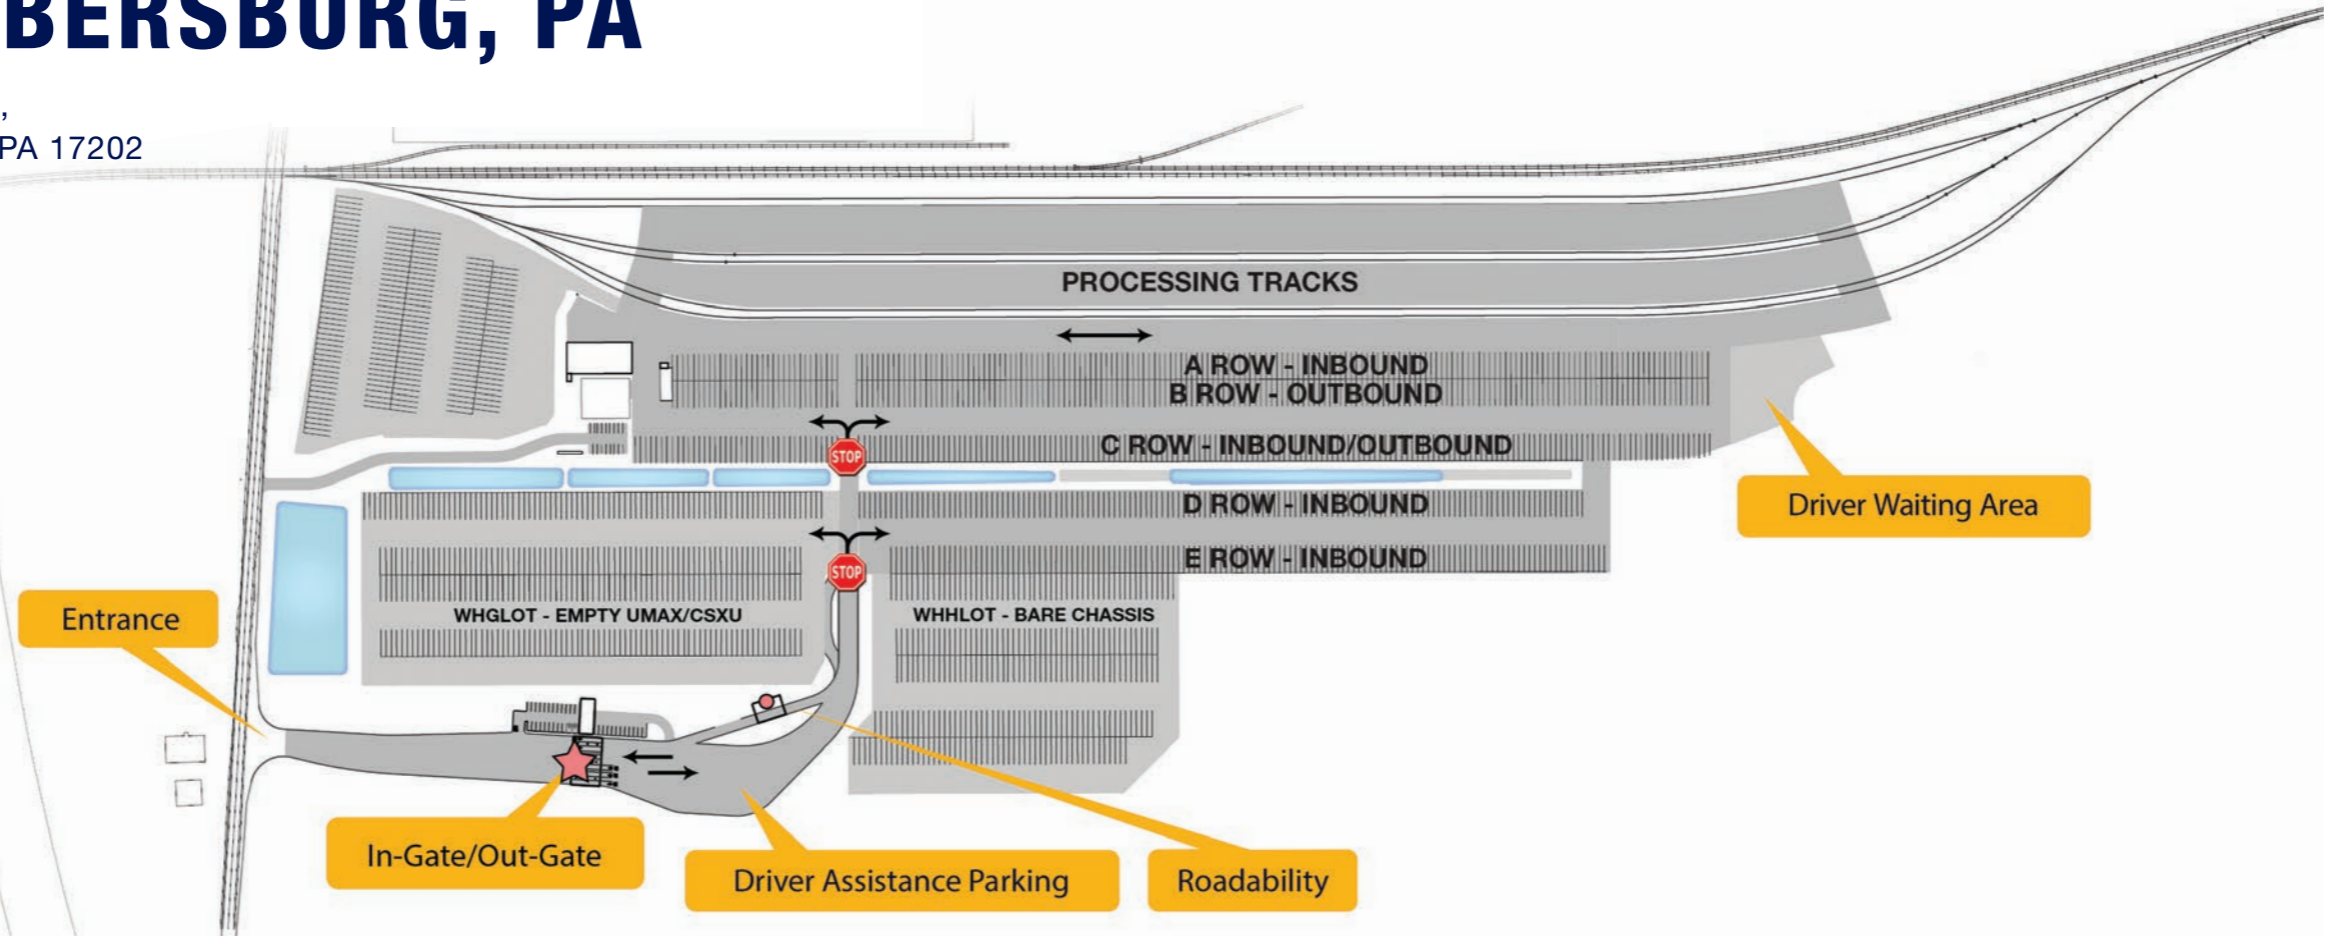

TERMINAL-SPECIFIC PROCESSES

CHAMBERSBURG, PA

OPERATING PROCESS

- Obey all posted speed limit and traffic signs.
- Ramp equipment has right-of-way.
- Park in area indicated on app or ticket.
- Bolster should be even with yellow line.
- Draymen must remain in their vehicles while receiving service at Roadability.
- All units require billing except for empty CSXUs and UMXUs.

IN-GATE

- Use Drive-up or Walk-up kiosks to process mission.
- For severely damaged equipment, go directly to Roadability.
- Remove and properly dispose of zip ties.
- Ensure lock bars are engaged.

OUT-GATE

- Using the XGate app, draymen are responsible for verifying they have the correct units.
- Out-gate portal uses cameras to verify unit numbers.
- Do NOT back out of the out-gate lane.

DRIVER ASSISTANCE

Draymen requiring assistance should call 717-765-1095.